

ORBIGO

OrbiGo POC Client Config File (Wfinit.cfg)

wfinit.cfg is the plain text file saved in the root folder of mobile device storage containing the settings listed in the table below.

Setting name	Value	Comments
LoginName	User name	Example: LoginName=user1
Password	User password (case sensitive)	Example: Password=pwd1
Server	Server address	Example: Server=192.168.10.10:10001
ForceLoginCredentials	True or False	If ForceLoginCredentials is False or missing, login credentials specified in wfinit.cfg are applied only if no other credentials were previously used on the device. If ForceLoginCredentials is True, only login credentials specified in wfinit.cfg are used to login. Example: ForceLoginCredentials=True
AutoLogin	True or False	Set to True to login automatically. Example: AutoLogin=True
AutoStart	True or False	Set to True to launch WalkieFleet client on device boot. Example: AutoStart=True
ShowOnBoot	True or False	Set to True to keep WalkieFleet client in foreground after device boot. ShowOnBoot only makes sense when AutoStart=True. Example: ShowOnBoot=True
CH1, CH2, ... CH100	Group or user name (case sensitive)	Makes sense for devices having knob selector to switch channels. Assign group name or user name to call by default when it is selected by knob. Example: CH1=GROUP1
MaxChannels	Numeric	Number of channels assigned on the knob selector (by means of CH1 .. CH100 entries). MaxChannels makes sense for infinite knob selector. Example: MaxChannels=4

DefaultGroup	Group name (case sensitive)	Group to call by default. Example: DefaultGroup=GROUP1
SetDefaultSelected	True or False	Set to True to set DefaultGroup as selected group. Note! Group chosen as default by knob selector will be set as Selected when SetDefaultSelected=True. Example: SetDefaultSelected=True
KeepMicOpen	True or False	Set to True to keep microphone always open. Reduces call initiation time, but restricts using microphone by other applications.
LowBatteryLevel	Numeric (Percent)	Starts low battery warning when battery level goes under this value. Example: LowBatteryLevel=20
LowBatteryWarning	Text	Text message to pronounce when battery goes lower than LowBatteryLevel. Example: LowBatteryWarning=Time to charge the battery
DisableTTS	True or False	Set to True to disable all voice announcements. Example: DisableTTS=True
TTSLang Language code	(ISO 639-1)	Force this language to use in text-to-speech service. Example: TTSLang=en
PingServer	True or False	Set to True to send ping from client to server every 1.5 seconds. Keeps IP channel "warm" and considerably reduces call initiation delay after long idle time. Note! PingServer=True noticeably increases battery consumption. Recommended for use on devices having big capacity battery. Example: PingServer=True
NotificationVolume	Numeric (Percent)	Set percentage of the maximum sound level to adjust tone's loudness. Example: NotificationVolume=50
FlipRearCamera	True or False	Set to True to flip rear camera for video calls. Example: FlipRearCamera=True
SmallScreen	True or False	Enables small screen mode for devices having small display. Example: SmallScreen=True